

## Quick Installation Guide

Wireless-N Broadband Router

Suitable for: N100RE, N200RE


Ver. RX1405

Copyrights 2014 by TOTOLINK All rights reserved. Website <http://www.totolink.net>  
Information in this document is subject to change without prior notice.

# 1 Hardware Installation

If you access Internet by ADSL, please follow below steps to complete the hardware connection.

- Step 1. Connect Router's WAN port to ADSL's LAN port.
- Step 2. Connect the PC to any one of Router's LAN port.
- Step 3. Power on the Router.

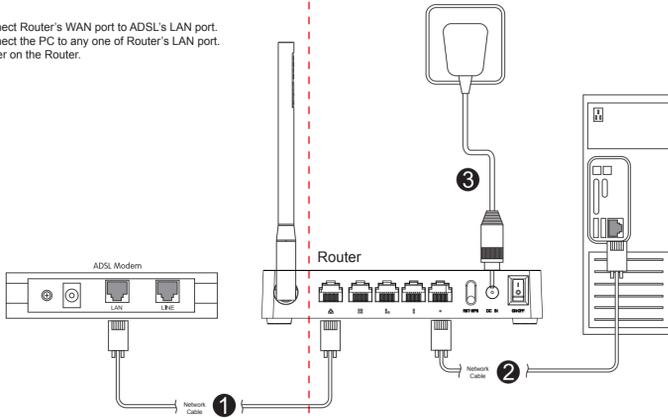

### LED Indicator and Button Description.

POWER	This indicator lights blue when the router powered on, otherwise it is off.
CPU	When the router powered on, this indicator keeps blinking blue.
WiFi	This indicator lights blue when the wireless connection enabled.
WAN	When the WAN port is connected successfully the indicator lights blue. While transmitting or receiving data through the WAN port the indicator blinks blue.
4/3/2/1 LAN	When the LAN port has a successful connection, the indicator lights blue. While transmitting or receiving data through the LAN port the indicator blinks blue.
RST-WPS	Press the button for more than 5 seconds, the router will restore factory settings. For less than 5 seconds, the router will establish Wi-Fi protected settings(WPS) automatically.


### NOTE:

- Please disconnect the power adapter and all cables during thunderstorm weather.
- Keep away from heat source and keep well ventilated.
- Please pay attention to the waterproofing and moisture-proof when storing, transporting and running.
- The power supply must reach the rated current and power.
- Put the router in flat places.

# 2 Set Up PC


**Windows 2000/XP** For Windows 2000 or Windows XP Operating System, please comply with following steps to set up.

- Right-click "My Network Places", click "Properties"
- Right-click "Local Area Connection", click "Properties"
- Double-click "Internet Protocol (TCP/IP)"
- Choose "Obtain an IP address automatically" and "Obtain DNS server address automatically", click "OK"; go back to previous interface and click "OK"

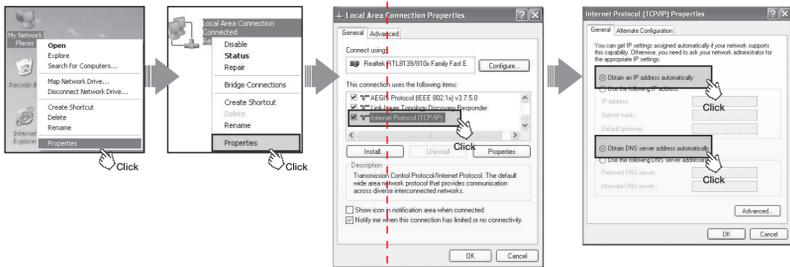

**Windows Vista/7** For Windows Vista or Windows 7 Operating System, please comply with following steps to set up.

- Click "Start—Control Panel—Network and Internet—Network Connection", right-click "Local Area Connection", and choose "Properties".
- Double-click "Internet Protocol Version 4 (TCP/IPv4)".
- Choose "Obtain an IP address automatically" and "Obtain DNS server address automatically", click "OK"; go back to previous interface and click "OK"

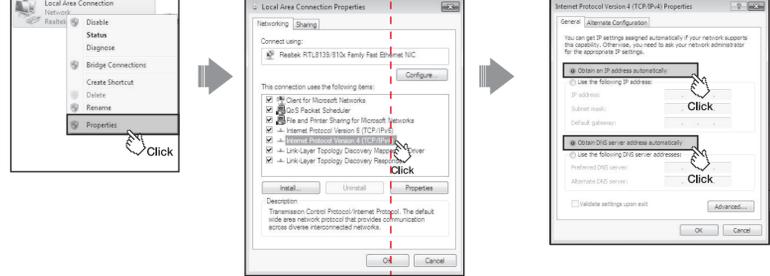

# 3 Set Up Router

Please set up the router following below steps.

- Run the Web browser.




- Type <http://192.168.1.1> in the web browser, then press Enter.

<http://192.168.1.1>


- Input the User Name and Password, then click Login button (The default Username and Password is admin).



- Now you have logged in the Easy Setup interface.

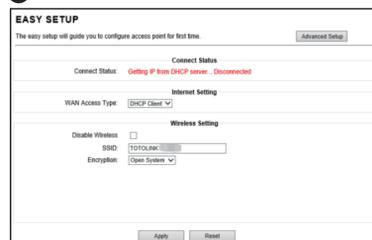

- You can change WAN Access Type directly.

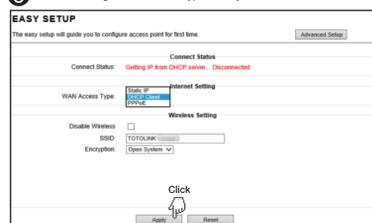

Internet Access Mode	
A	Static IP: Fixed IP address, Subnet mask, Default gateway and DNS server
B	DHCP Client: No configuration needed.
C	PPPoE: For ADSL users, please input User name & Password

**A Static IP**

WAN Access Type: **Static IP**

IP Address: 172.1.1.1

Subnet Mask: 255.255.255.0

Default Gateway: 172.1.1.254

DNS 1: 0.0.0.0

DNS 2: 0.0.0.0

**B DHCP Client**

WAN Access Type: **DHCP Client**


**C PPPoE**

WAN Access Type: **PPPoE**

User Name:

Password:


- Wireless Settings (for Encryption, WPA-Mixed recommended). Then click Apply.

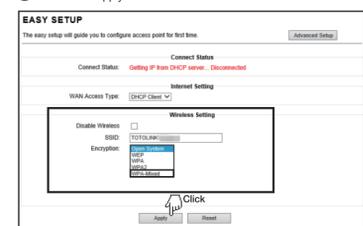


**NOTE:**  
After you set the Pre-Shared Key, please remember your SSID and the Pre-Shared Key to connect with your wireless LAN.  
Press for about 2-3 seconds, the system LED indicator keep solid light, it means WPS working, while press for about 10 seconds, all LEDs blinks quickly, the device will restore to factory default settings.

# 4 Wireless Network Connection


- Right-click "My Network Places", click "Properties"

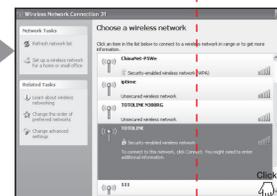

- Right-click "Wireless Network Connection", and click "View Available Wireless Networks"

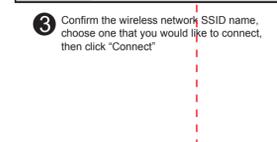

 - Confirm the wireless network SSID name, choose one that you would like to connect, then click "Connect"



- Input the encryption key and click "Connect"



- Have connected wireless network, you can access internet through wireless mode.



# 5 FAQ

- How to reset the router to default factory settings?**  
1. When the router is powered on, press the RST-WPS button for about 10s.  
2. The router's CPU LED indicator keeps flashing, which means you have reset your router to default settings successfully.
- How to find the IP address and user name & password on the device?**  
On the side panel of the Router, there is IP address, User name and password printed on the case. See below:

