



Quick Installation Guide


Wireless N Broadband Router

Suitable for: N150RH, N150RT, N151RT, N300RH, N300RT, N302RE, N302RT

V2.1502

Copyrights © 2015 by TOTOLINK All rights reserved. Website: <http://www.totolink.net>
Information in this document is subject to change without prior notice.

1 Hardware Installation

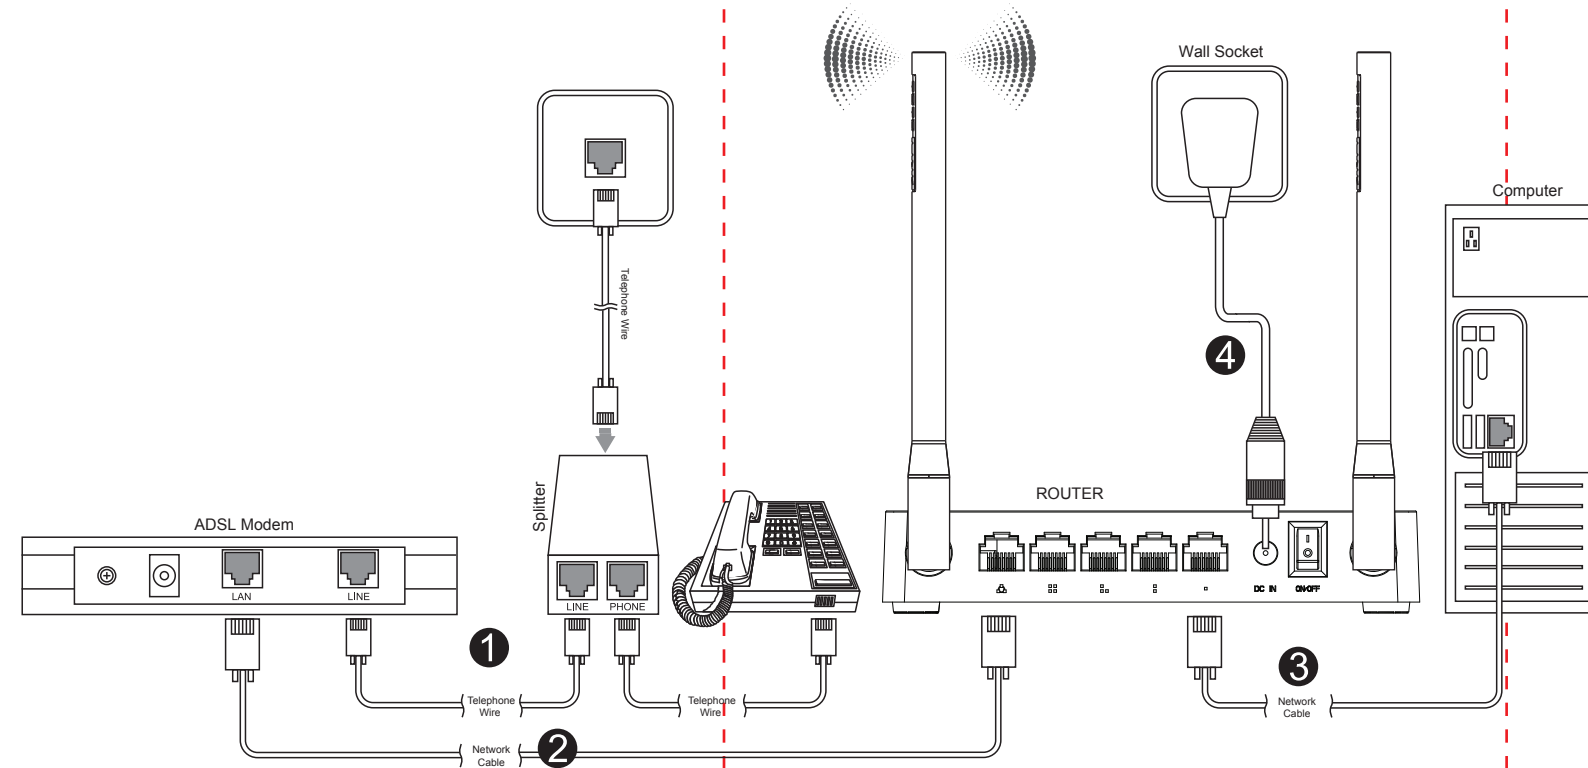

LED Indicators

POWER	Light is on when router is power on.
CPU	Light is on when systems is working.
WiFi	The indicator light is on when Wi-Fi is enabled.
WAN	Light on when WAN port connected successfully.
1/2/3/LAN	Light blinking while transmitting or receiving data.
1/2/3/LAN	Light on when the LAN port successful connected.
1/2/3/LAN	Light blinking while transmitting or receiving data.

Ports Description

DC IN	Used for connecting the power adapter.
ON/OFF	Used for power on or off the router.
1/2/3/LAN	Used for connecting the router to local PC.
WAN	Used for connecting the router to the Internet.
Reset/WPS	Reset: Press the button for more than 5 seconds, the router will restore factory settings.
RST-WPS	WPS: Press the button less than 5 seconds, enable the router WPS function.

NOTE:

- Please disconnect the power adapter and all cables during thunderstorm weather.
- Keep away from heat source and keep well ventilated.
- Please pay attention to the waterproofing and moisture-proof when storing, transporting and running.
- The power supply must reach the rated current and power.
- Put the router in flat places.

2 Set Up PC

Windows Vista/7 For Windows Vista or Windows 7 Operating System, please comply with following steps to set up.

- Click 'Start—Control Panel—Network and Internet—Network Connection', right-click 'Local Area Connection', and choose 'Properties'.
- Double-click 'Internet Protocol Version 4 (TCP/IPv4)'.
- Choose 'Obtain an IP address automatically' and 'Obtain DNS server address automatically', click 'OK', and then click 'OK'.

Windows 8 For Windows 8 Operating System, please comply with following steps to set up.

- Click 'Start—Control Panel—Network and Sharing Center—Change adapter settings', right-click 'Ethernet', and choose 'Properties'.
- Double-click 'Internet Protocol Version 4 (TCP/IPv4)'.
- Choose 'Obtain an IP address automatically' and 'Obtain DNS server address automatically', click 'OK', and then click 'OK'.

3 Set Up Router


Please set up the router following below steps.

- Run the Web browser.
- Type 192.168.1.1 in the web browser, then press Enter key.
- Enter User Name and Password (the default User Name are 'admin'), then click LOGIN or press Enter key.
- Now you have logged in the Easy Setup interface.
- Choose the WAN connection type and enter the parameters provided by your ISP.
- Here we take PPPoE as example. User Name and Password are required.
- For Wireless Settings, you can setup SSID (network name) and encryption.
- By default, no encryption selected. Here WPA2 Mixed is recommended for you to protect your network, then type in your password.
- On this page, you can also enable or disable IPTV. If enable this function, please enter the VLAN ID and choose correct IPTV port. Then click Apply to save the settings.


10 Wait for a while, Internet connected successfully! Please click finish.



11 Now the router's Status interface turns up, it shows connected type and IP address & DNS you get.

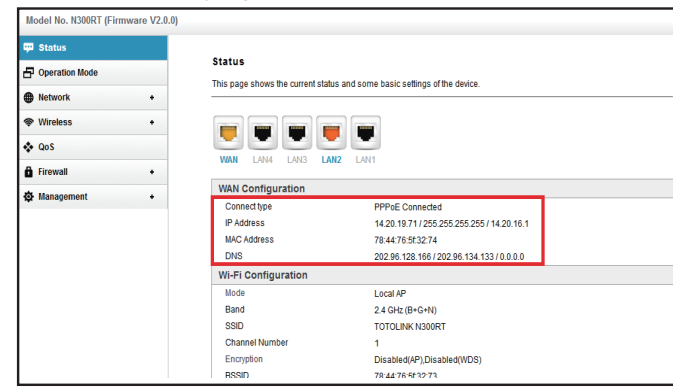

12 Try any website to test the Internet. Here we type in www.totolink.net.

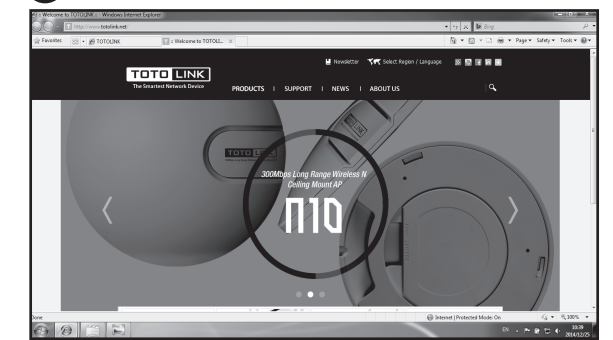

NOTE:

After you set the Pre-Shared Key, please remember your SSID and the Pre-Shared Key to connect with your wireless LAN.
Press for about 2-3 seconds, the system LED indicator keep solid light, it means WPS working, while press for about 10 seconds, all LEDs blinks quickly, the device will restore to factory default settings.

4 FAQ

1 How to reset the router to default settings?

- Please make sure your router's power is on regularly, then press the RST-WPS button for about 10s.
- Loosen the button until your router's LED lights all flashing, then you have reset your router to default settings.

2 Forget the password?

Please reset your router to default settings firstly, and set a new password. Both of the default Username and Password are admin. The default IP is 192.168.1.1.